




Asus U50F-RBBAG05 RAM Replacement

This guide is to show you how to remove/replace the RAM of your Asus U50F-RBBAG05.

Written By: Kelly Greeling

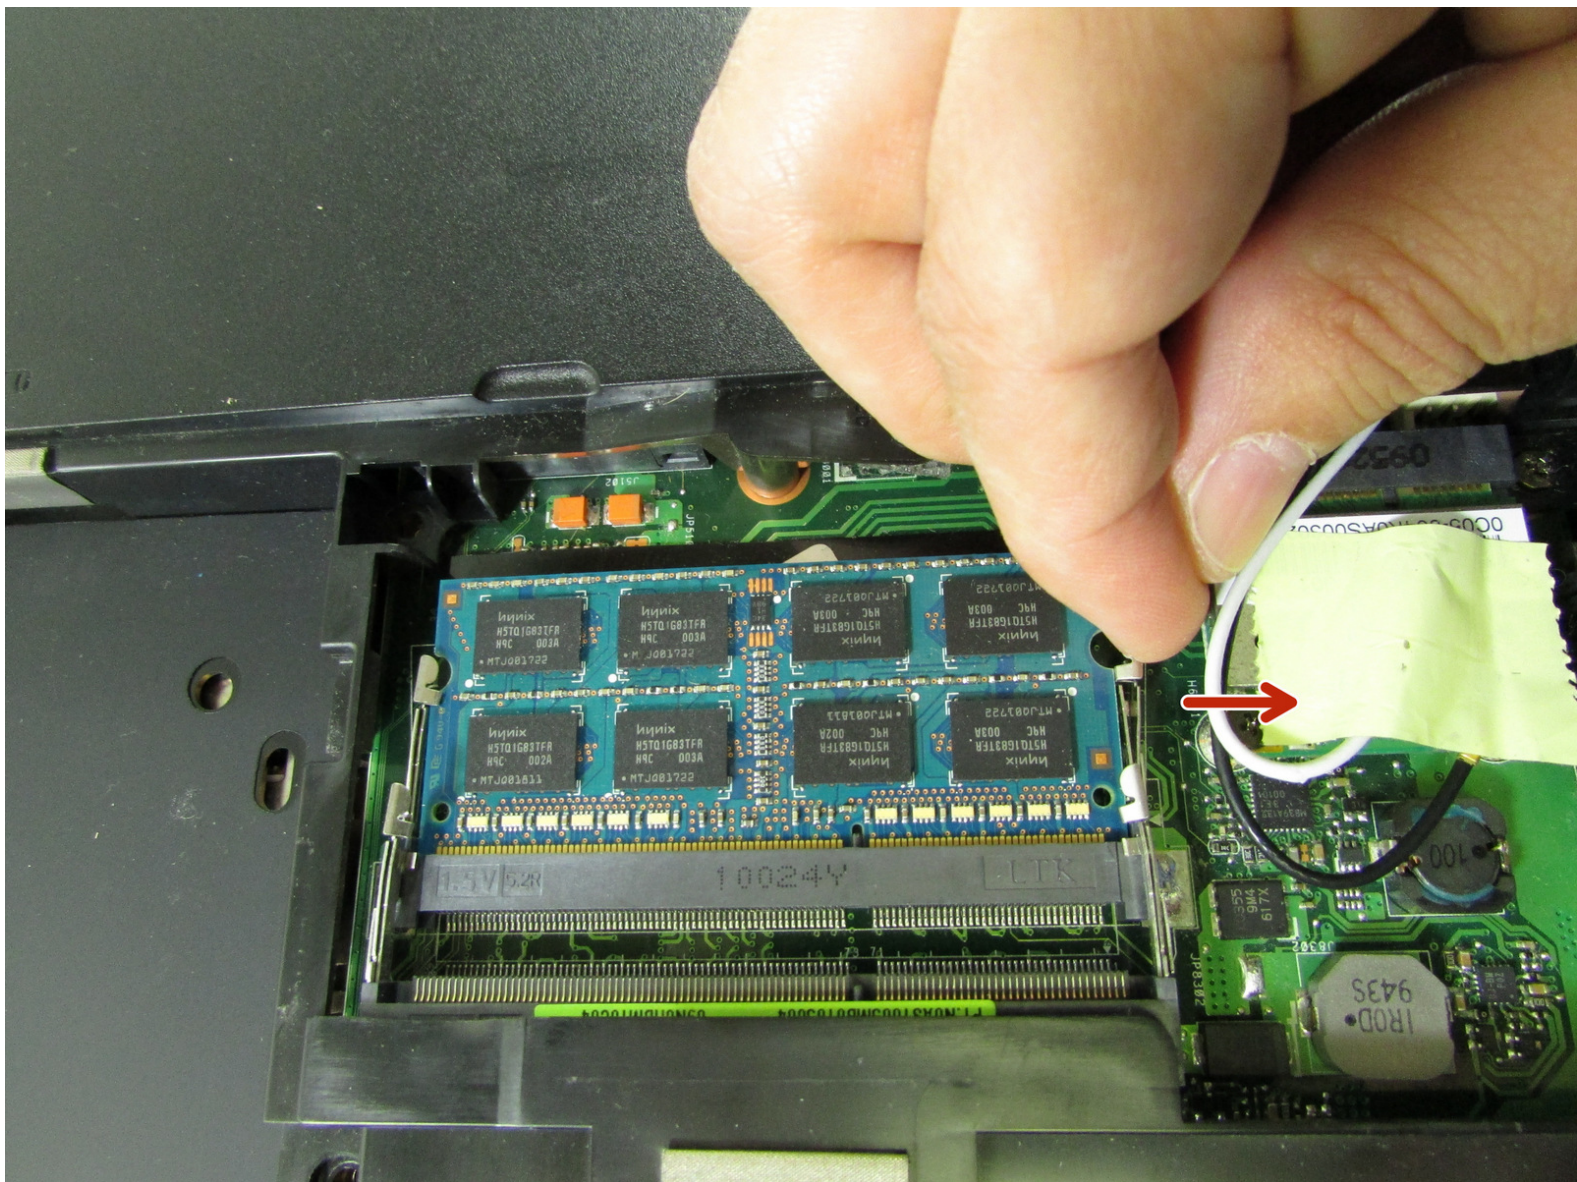

INTRODUCTION


We will teach you how to remove/replace the RAM of your Asus U50F-RBBAG05.



TOOLS:


- [Philips Head Screwdriver: Size PH1](#) (1)
 - [Spudger](#) (1)
 - [dry erase marker](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery

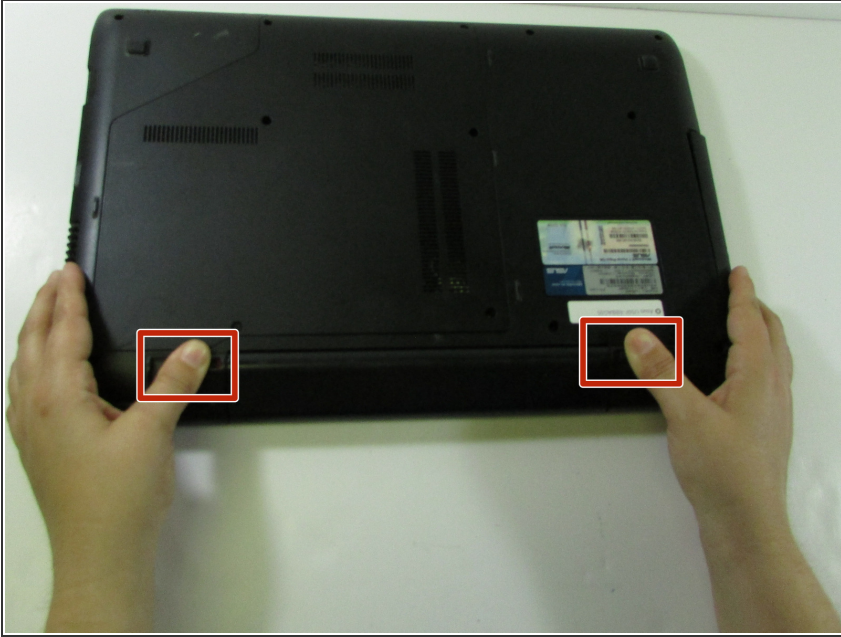


- Turn the laptop over so the bottom is facing up.
 - Slide the tabs on either side of the battery away from the battery, toward the edges of the laptop.
 - Slide the left tab to the left to lock it into the unlocked position. Red showing next to the tab signifies that it's unlocked.
- i** You will have to hold the right tab to the right to keep it unlocked while removing the battery.

Step 2

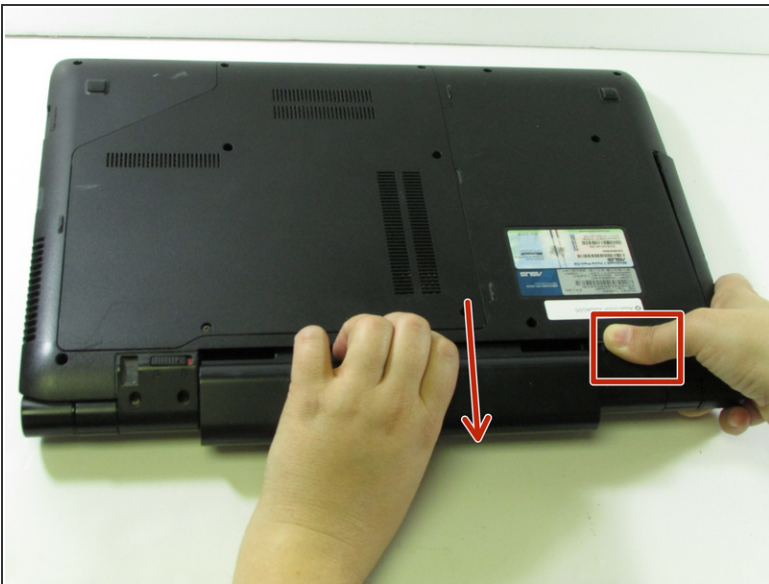

- Hold down the tab on the right while sliding the battery out.
- Remove the battery.

Step 3 — Underpanel

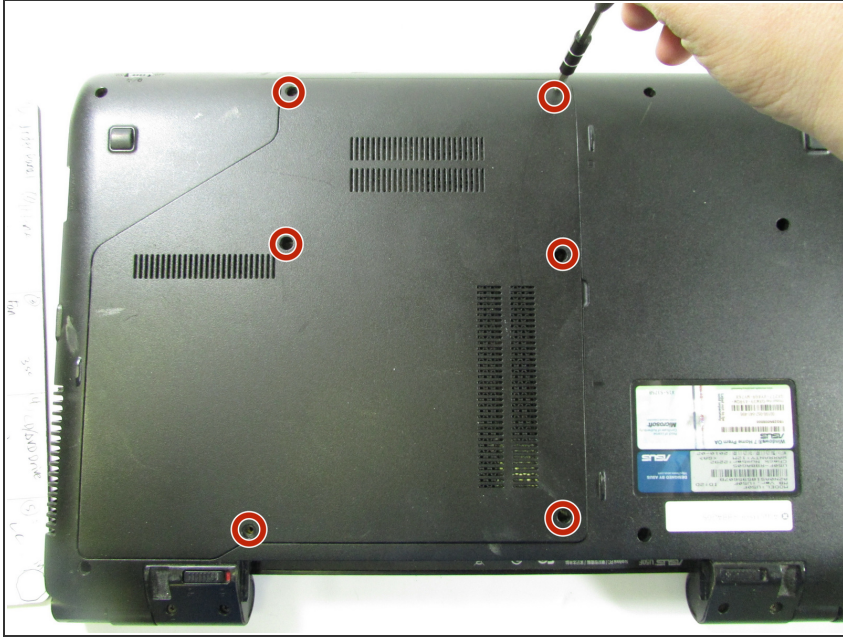



- Remove 6 screws

Step 4





- Pry the lower panel up with your fingernail/spudger.

Step 5

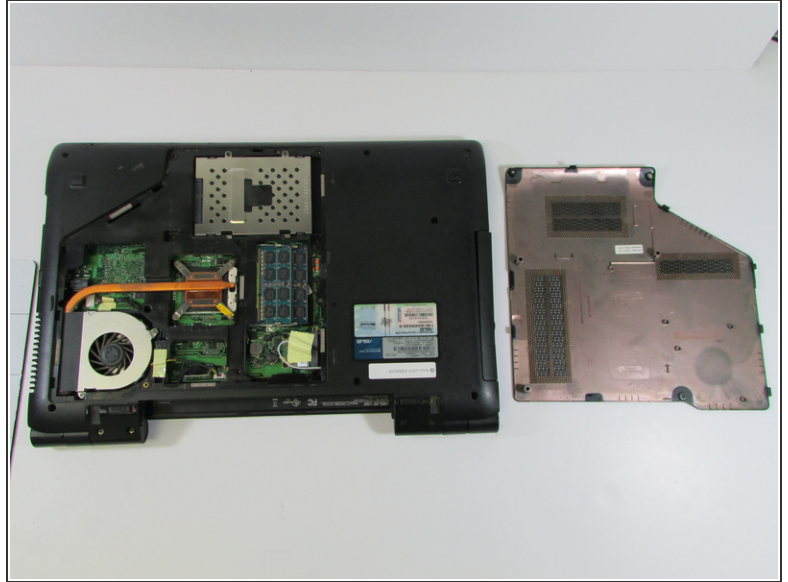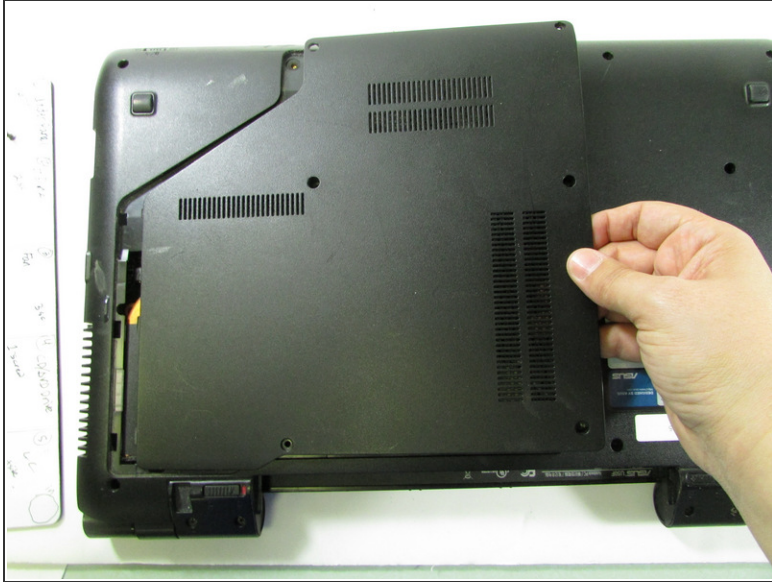



- Lift up and remove

Step 6 — Random Access Memory (RAM)

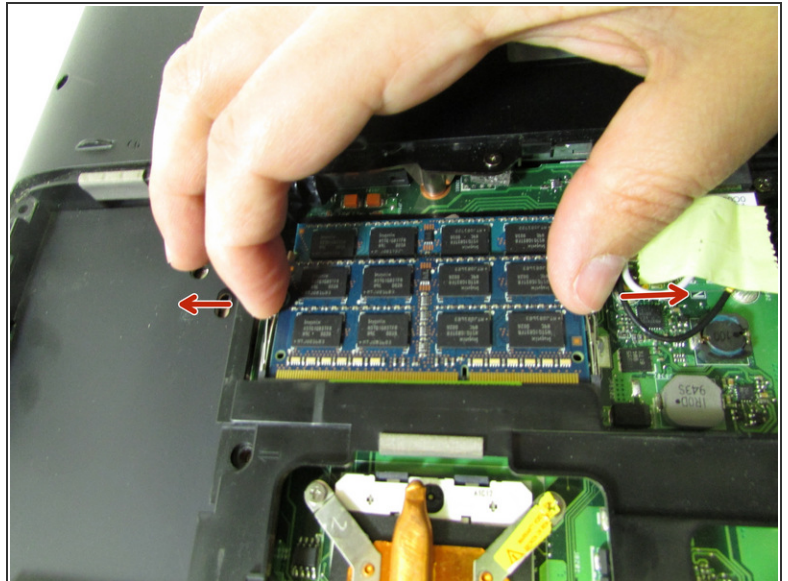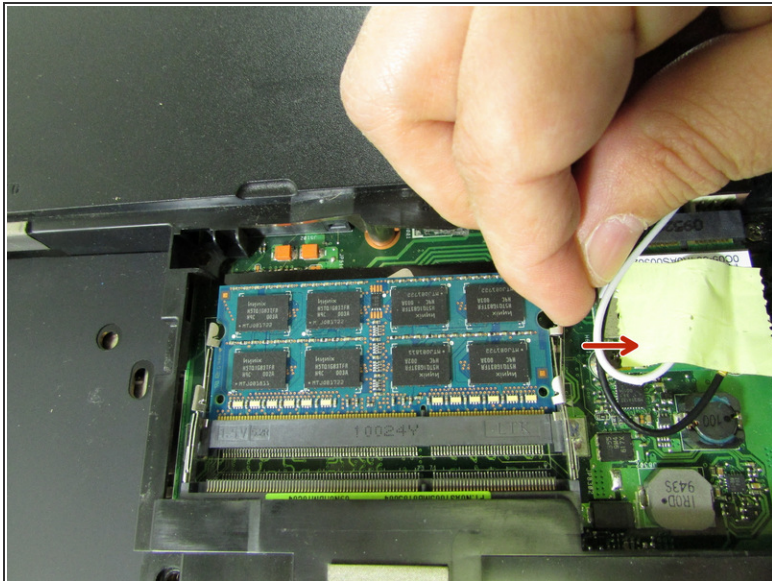

- Push back on the silver clips until you hear/feel a pop.

Step 7

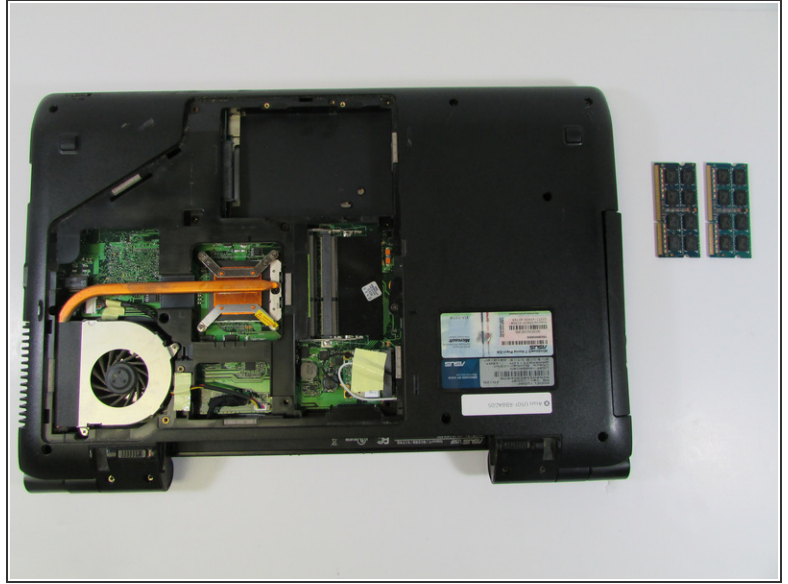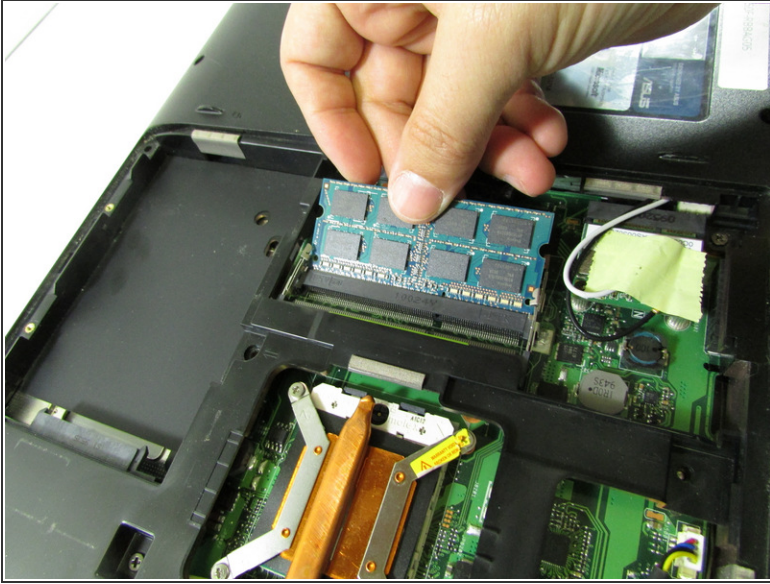

- Pull back RAM card and remove
- Repeat for lower RAM card

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-07 02:31:04 PM.